


Accurate Lock and Hardware Co.

Manufactures of
Custom Locks and Architectural Hardware

9525 / 9539

Interior Passage/Privacy Installation Template


Note: All Dimensions Reflect Suggested Mortise Prep Dimensions. (Actual Lock Dimensions Are Slightly Smaller).

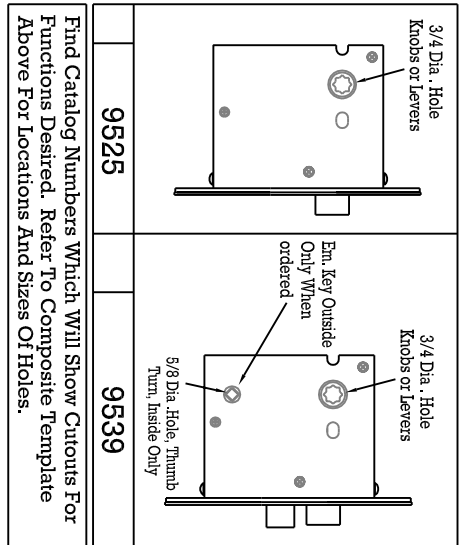


Find Catalog Numbers Which Will Show Cutouts For Functions Desired. Refer To Composite Template Above For Locations And Sizes Of Holes.

Responsibility
Door And Frame Manufacturers Are Responsible For Providing Adequate Construction Or Re-Inforcement For Proper Installation Of Hardware Shown.


Annie Place, Stamford, CT. 06902
(203) 348-8865 FAX (203) 348-5234
E-MAIL: Sales@Accurate.to
www.Accurate.to

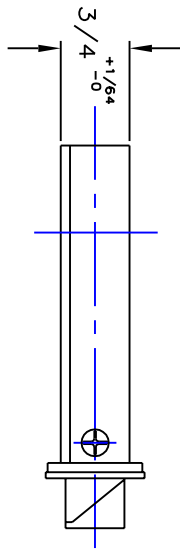



Insert BackSet As Req'd
2-1/2, 2-3/4

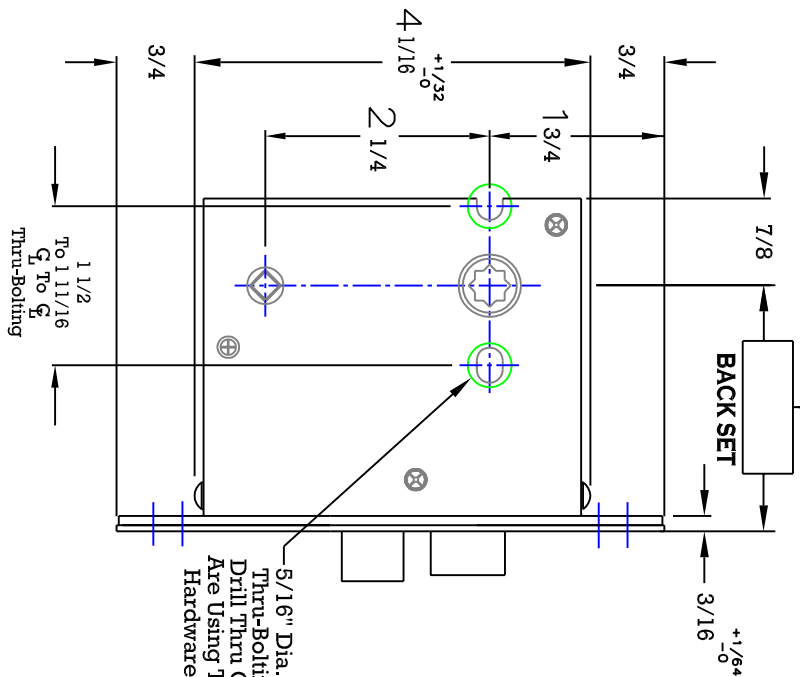

5/16" Dia. (7.9mm) Thru-Bolting Holes Drill Thru Only If You Are Using Thru-Bolting Hardware (2 Places)

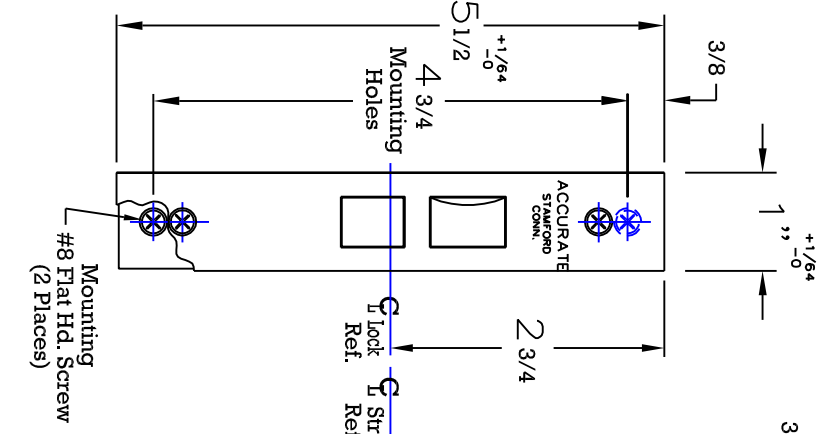

MOUNTING #8 Flat Hd. Screw (2 Places)

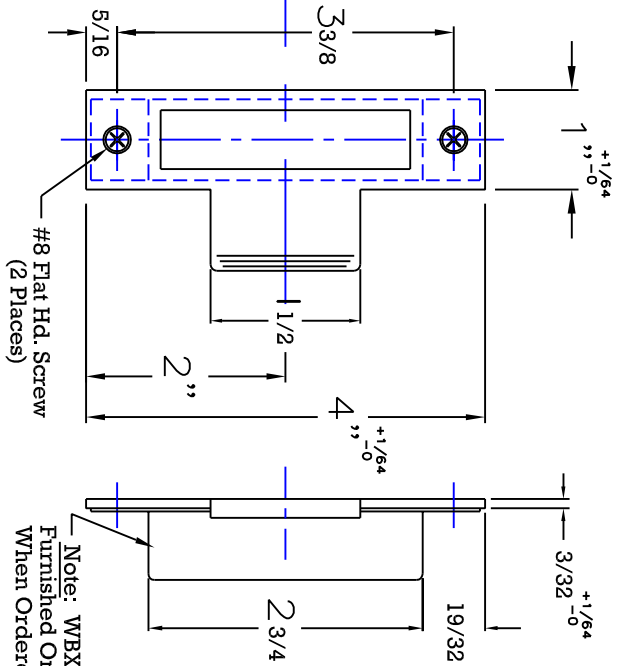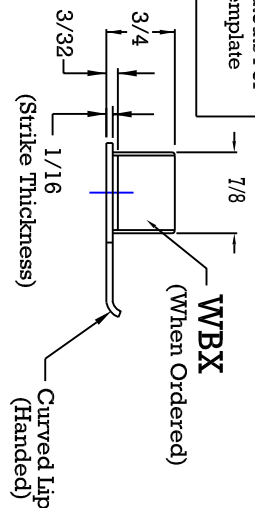

#8 Flat Hd. Screw (2 Places)

Note: WBX Furnished Only When Ordered.